



BAU




Anleitung

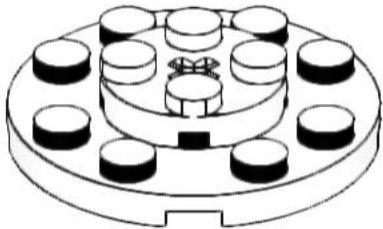

1

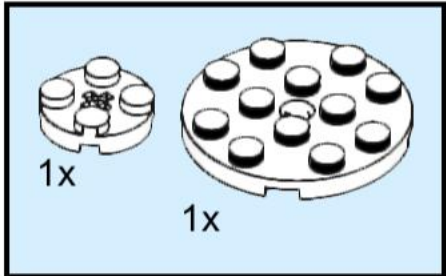


2

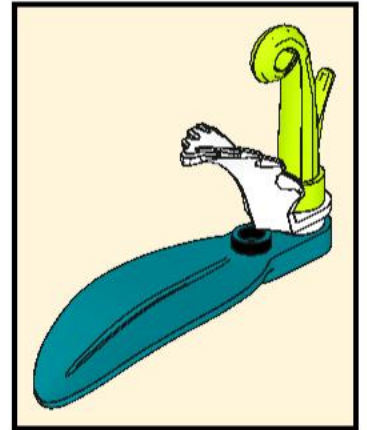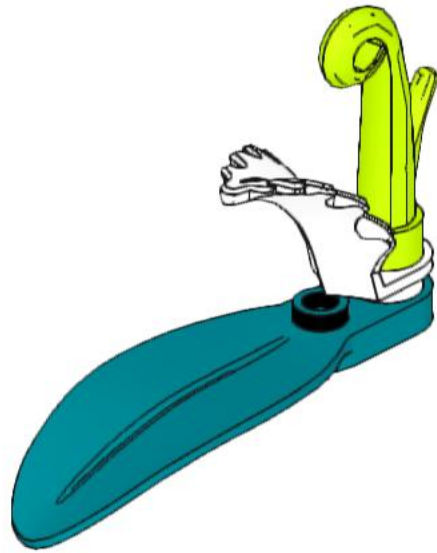
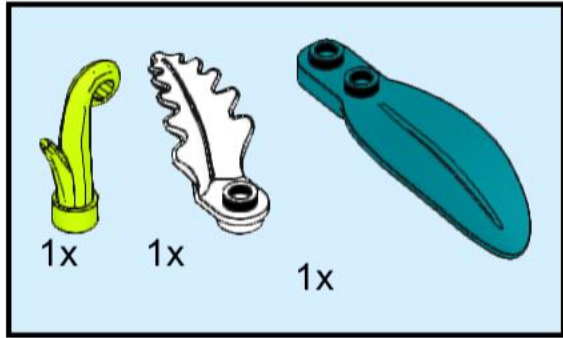


8x

3

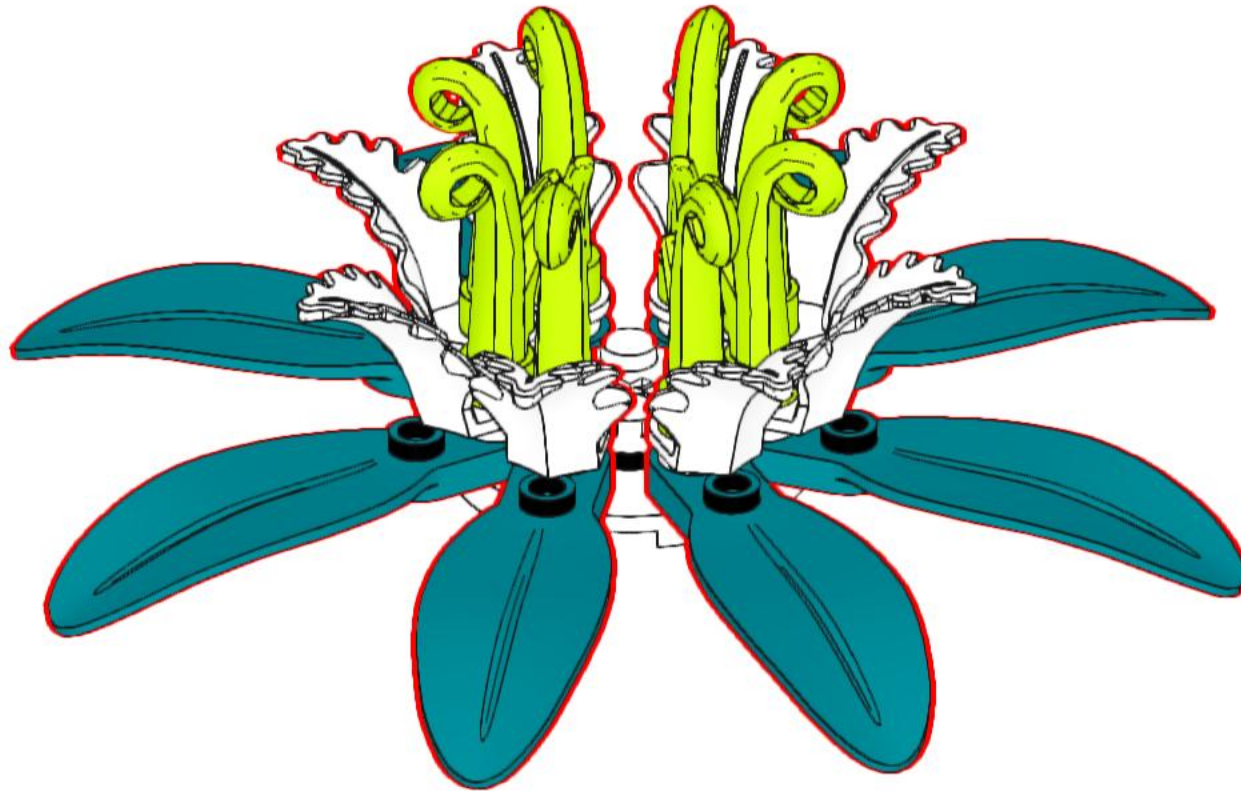


4

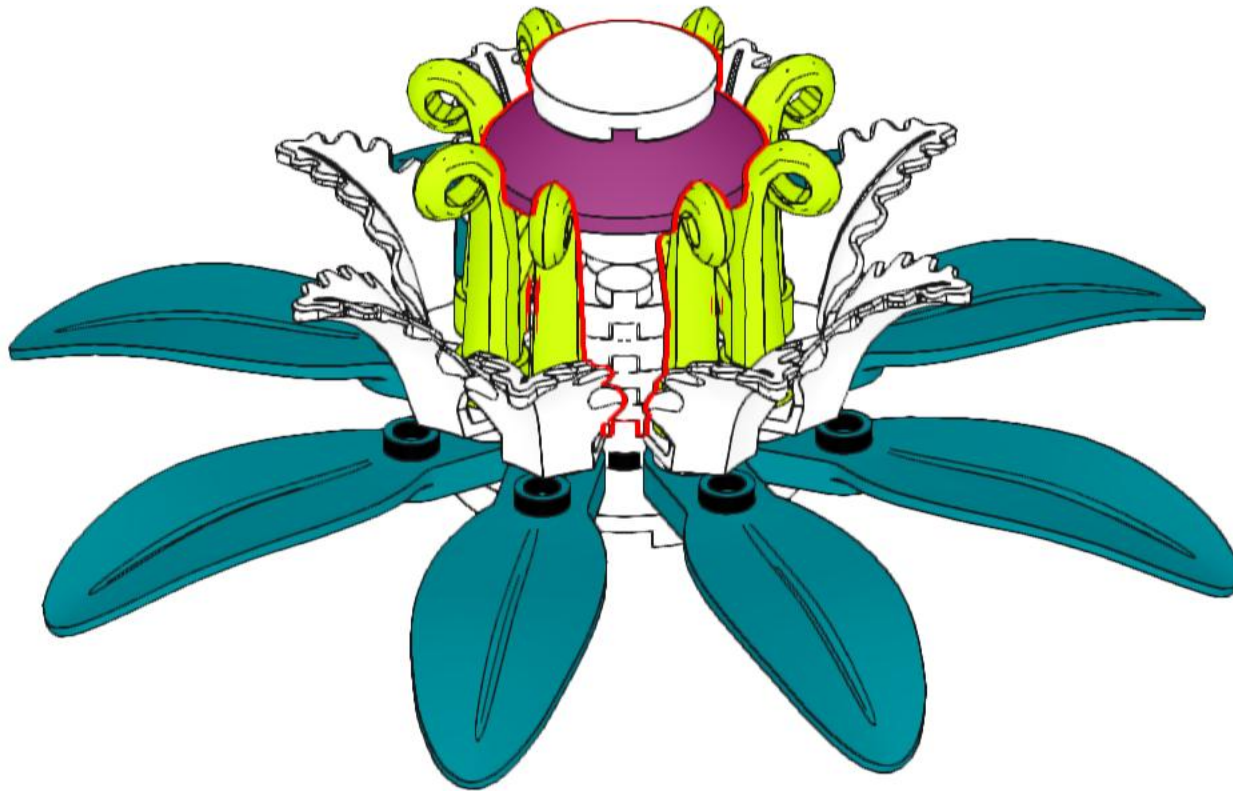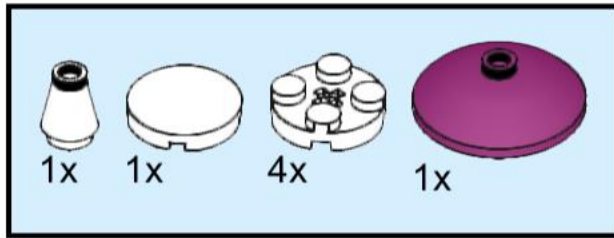




1x
4589
White

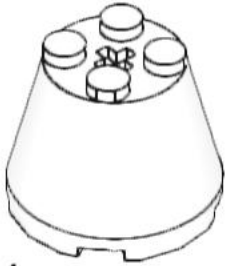


1x
6233
White




1x
32016
Green

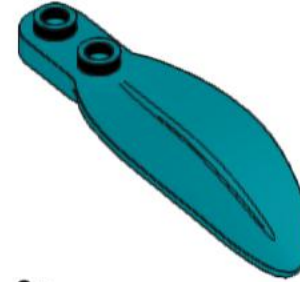

8x
3565
Dark Turquoise

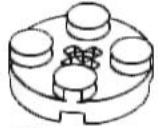

5x
4032
White

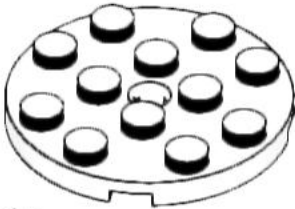


1x
60474
White



1x
3737
Green



1x
43898
Magenta




1x
14769
White



8x
2682
White



8x
15279
Lime

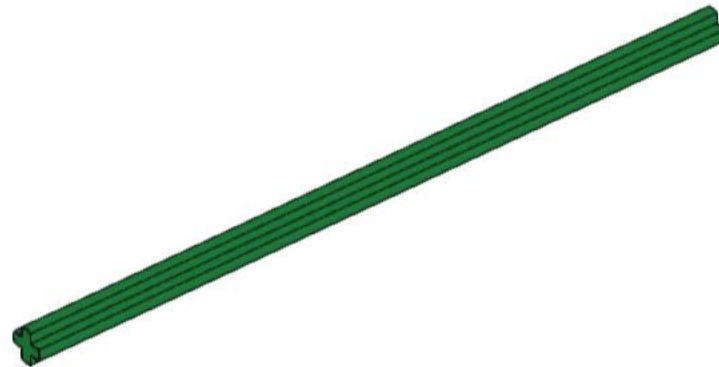

1x
3708
Green



1x
4073
Green

5

